



TOYPD2/LEXP2 Quicksheet

Emulation Modes:

The factory radio will recognize the TOYPD2/LEXP2 as a CD changer. You must enable the proper emulation mode for this to function properly.

- Vehicles with Navigation radios capable of MP3 playback require **MP3 Emulation Mode**.
- All other vehicles require **CD Emulation Mode**.

CD Emulation Mode programming steps:

1. Turn ignition OFF.
2. Put right DIP switch DOWN, left DIP switch UP.
3. Put ignition into ACC position.
4. Wait for long beep followed by a few short beeps.
5. Turn ignition OFF.
6. Put both DIP switches UP.
7. Wait 10 seconds.
8. Put ignition into ACC position.

MP3 Emulation Mode programming steps:

1. Turn ignition OFF.
2. Put left DIP switch DOWN, right DIP switch UP.
3. Put ignition into ACC position.
4. Wait for long beep followed by a few short beeps.
5. Turn ignition OFF.
6. Put both DIP switches UP.
7. Wait 10 seconds.
8. Put ignition into ACC position.

MD Changer Emulation Mode programming steps (Lexus only):

1. Properly install this unit.
2. Put both programming switches in "DOWN" position.
3. Put ignition switch into "ACC" position.
4. Wait for long beep followed by a few short beeps. This may take up to one minute.
5. Put ignition switch into the "OFF" position.

6. Put both DIP switches UP.
7. Wait 10 seconds.
8. Put ignition into ACC position

You must place your files on the iPod into playlists in order for the TOYPD2/LEXP2 to function. This can be done in iTunes by creating playlists and adding tracks from your music library.

- Most radios in cars from 1998-2002 will support up to 12 playlists from the iPod, with up to 99 songs in each playlist.
- Most radios in 2003 and newer vehicles will support up to 99 playlists from the iPod, with up to 99 songs in each playlist.
- Navigation units will support up to 999 playlists with up to 999 songs in each.